


## Five

The high-fidelity speaker for superior sound—

- Three woofers provide deep bass within a sealed architecture that eliminates reverb and echo. Two side tweeters create an ultra wide soundstage while a center tweeter optimizes vocal playback.
- Use the line-in port to connect your turntable or another device—simple control with the Sonos S2 app or Apple AirPlay 2.
- Versatile design with smart orientation sensing. Pair two speakers horizontally and Five automatically separates the left and right channels for impressive stereo sound. When paired vertically, each smartly adjusts to mono for more detailed stereo separation and an even wider soundstage.
- Pair two Fives for left-right stereo sound or use two Fives as rear surrounds for your home theater.
- Compatible with  only.
- See [Getting started](#) when you're ready to add a Five to your Sonos system.

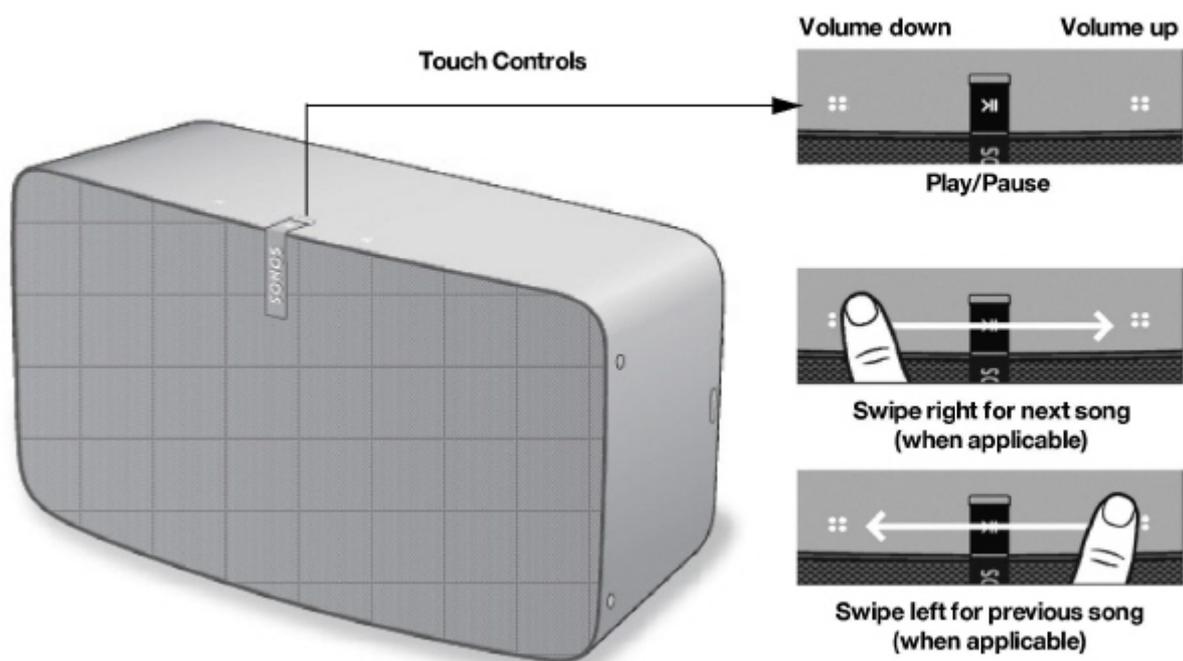

**Note:** The front grille is not removable. Tampering with the grille may result in damage to your Five.

### Controls and lights

|   |                           |  |
|---|---------------------------|--|
|  | <b>Volume control</b>     | Touch and hold to quickly change the volume: <ul style="list-style-type: none"> <li>• <b>Volume up</b> (right)</li> <li>• <b>Volume down</b> (left)</li> </ul>           |
|  | <b>Play/Pause</b>         | <ul style="list-style-type: none"> <li>• Press <i>once</i> to play or pause music.</li> <li>• Press and hold to add the music that's playing in another room.</li> </ul> |
|  | <b>Next/Previous song</b> |  |

- Swipe right across the touch controls to skip to the next song.
- Swipe left to go to the previous song.

**Note:** You can't skip forward or go back when listening to a radio station.

---


### Status light

Indicates the status. [Learn more](#)  
If the light is distracting, you can turn it off in your room's settings.

---

**Note:** If you don't want anyone (like a child) to control playback or change the volume using the speaker touch controls, you can disable them in the room's settings.

## Connector panel

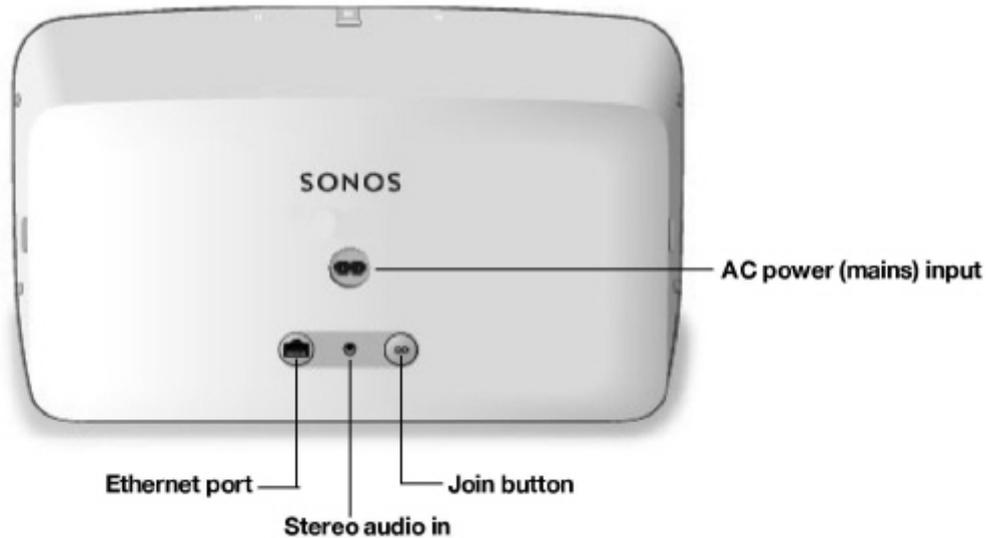


---

### Join button

Press to connect during setup.

---

### Ethernet port

Use an Ethernet cable if you want to connect to a router, computer, or network-attached storage (NAS) device (optional).

---

### AC power (mains) input

Use only the supplied power cord (using a third-party power cord will void your warranty).

**Note:** Insert the power cord firmly until it is flush with the bottom of the speaker.

---

### Stereo audio in (3.5mm / 1/8")

Use to connect external music players.

---

## Select a location

You can put your speaker just about anywhere. For maximum performance, we have a few guidelines:

- The Five is a substantial and powerful speaker and should be placed on a flat surface that is robust and durable enough to properly support it. Make sure Five's rubber feet sit completely on the flat surface.
- Allow at least 2" perimeter all around Five including its power cord.
- For a single Five speaker we recommend positioning the speaker horizontally to enable stereo sound.
- Place Five across the room from where you'll be listening (at or close to your ear height for best results).
- For stereo pair placement information, see [Stereo pairs](#).
- The Five is humidity resistant so you can use it in the bathroom; however it is not water resistant so don't position it near water or leave it outside during a rain storm.

## Speaker mounts and stands

For wall mount kits or stands, tailored to perfectly fit your Sonos products, see [Accessories](#) on our website. Follow the instructions in the kit.

## Line-in

Connect an external source like a phono preamp (your [turntable](#) may have a built-in phono preamp), or other audio device. [Learn more.](#)

## Specifications

| Feature  | Description   |
|--|---|
| <b>Audio</b>   |   |
| <b>Amplifier</b>   | Six Class-D digital amplifiers perfectly tuned to match the six dedicated speaker drivers and the acoustic architecture.  |
| <b>Tweeter</b>   | Three tweeters create the crispest and clearest high-frequency response.  |
| <b>Mid-Woofer</b>  | Three mid-woofers ensure you'll hear the faithful playback of mid-range vocal frequencies plus deep, rich bass—without distortion, even at high volumes.        |
| <b>Phased Speaker Array (three drivers on top and three on the bottom)</b> | Creates a wide stereo soundstage that directs the sound left, right, and center.  |
| <b>Stereo Pair</b>   | Turn two speakers into separate left and right channel speakers to create wider, deeper sound.  |
| <b>Home Theater</b>  | Add two speakers as surrounds for a true surround sound experience.   |
| <b>Networking*</b>   |   |
| <b>Wireless Connectivity</b>   | Connects to your home WiFi network with any 802.11b/g router. You can either change the router settings to 802.11b/g or connect a Sonos product to your router. |
| <b>Bluetooth Low Energy (BLE)</b>  | Temporarily connects to your mobile device for first-time set up.   |
| <b>Ethernet Port</b>   | One 10/100Mbps Ethernet port. You can plug a Sonos product directly into your router if your WiFi is unstable.  |
| <b>General</b>   |   |
| <b>Power Supply</b>  | Auto-switching 100 - 240 V ~ 50-60 Hz 2.3 A AC universal input.   |
| <b>Audio Line-In</b>   | Auto-detecting 3.5 mm audio line-in connection.   |
| <b>Dimensions (W x H x D)</b>  | 14.33 x 8.03 x 6.06 in. (364 x 203 x 154 mm)  |
| <b>Weight</b>  | 14 lb / 6.36 kg   |
| <b>Threaded Mount</b>  | None  |
| <b>Operating Temperature</b>   | 32° to 104° F (0° to 40° C)   |
| <b>Storage Temperature</b>   | -4° to 158° F (-20° to 70° C)   |
| <b>Humidity Resistant</b>  | Designed to withstand high-humidity, like in a bathroom with a running shower. (It is not waterproof or water-resistant.)                                       |
| <b>Product Finish</b>  | White matte or black matte exposure, graphite grille  |
| <b>Package Contents</b>  | Five, power cord, and Quickstart Guide.   |

\* Specifications subject to change without notice.

## Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos components.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.



**14. Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.